sonicare
the sonic toothbrush

elite®
e5000
series

ソニッケアー Elite e5000シリーズ

取 扱 説 明 書

保証書付

保証書は、この取扱説明書の裏側についておりますので記入を受けてください。

PHILIPS

商品のご確認

ソニッケアー Elite e5000シリーズをお買いあげいただき、誠にありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みの上、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

ソニッケアー Elite e5000シリーズは機種によって機能と付属品が異なります。ご使用前にお買い求めの商品のシリーズ名、品番、付属品をパッケージの側面にてご確認ください。

シリーズ	5300	5400	5700	5750
品　番	HX5251	HX5451	HX5751	HX5551
*形名（ハンドル内部）	HX5200	HX5400	HX5700	HX5500
スマートタイマー	○	○	○	○
イージースタート	○	○	○	○
カドペーサー	—	○	○	○
充電インジケーター	—	—	○	○

*形名はハンドル内部のブラシヘッドとの接合部底に記載があります。
※改良のため、仕様を予告なく変更することがあります。

目　次

●はじめに
商品のご確認……1
目次……2
必ずお守りください……3・4
各部の名称……5
充電の仕方……6

●ご使用方法
ソニッケアーの機能……7
使い方……8・9
上手なみがき方……10
お手入れの仕方……11

●困ったとき
故障かな？ と思ったら……12・13

●廃棄するとき
ニカド電池のリサイクルについて…14

●英文解説
Guidance in English ……15～27

●　保　証
保証とアフターサービス……28
仕 様……29
無料修理規定……30
保証書……最終ページ

必ずお守りください

安全上のご注意

●ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。

●誤った取扱をしたときに想定される内容を「警告」と「注意」とに区分けしています。

○絵表示について

⚠警告	人が死亡または重傷を負う可能性が想定される内容。
⚠注意	人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例

・記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容（左図の場合は高温注意）を示します。

・記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容（左図の場合は分解禁止）を示します。

・記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容（左図の場合は電源プラグをコンセントから抜くこと）を示します。

⚠警　告

●製品を廃棄するとき以外は絶対に分解しないでください。また、修理技術者以外の人は、分解したり修理をしないでください。火災、感電、けがの原因となります。修理はお買い上げの販売店またはソニッケアーコール（0120-418-608）にご相談ください。

●お手入れの際は必ず電源プラグをコンセントから抜いてください。再度コンセントを差し込む際には、充電器が濡れていないことを確認してください。また、濡れた手で抜き差ししないでください。感電やけがをすることがあります。

●電源コードや電源プラグが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。

●電源コードを傷付けたり、無理に曲げたり、引張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。また電源コードを熱したものの上に置いたり、屋外で使用しないでください。電源コードが破損し、火災・感電の原因となります。

●電源は交流100V専用コンセントを使用してください。火災・感電の原因となります。

●浴室での使用は絶対にしないでください。感電する場合があります。

●充電器を水につけたり、水をかけたりしないでください。ショート・感電のおそれがあります。

⚠ 注　意

●歯や歯ぐきに歯ブラシを強く当てたり、1ヵ所に長く当てたりしすぎないで下さい。歯や歯ぐきを傷つけることがあります。歯周病がひどい人などは歯科医師にご相談下さい。

●電源プラグを抜くときは、充電器の電源コード部を持たずに必ず先端の電源プラグを持って引き抜いてください。感電やショートして発火することがあります。

●充電時以外は、電源プラグをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電火災の原因になります。

●器具用プラグにピンやごみを付着させないでください。感電・ショート・発火の原因になります。

●歯ブラシのプラスチック部分を歯にあてないでください。歯や歯ぐきを傷つける原因になります。

●治療中の歯や不安定な入れ歯など口腔内に気になる症状がある場合は、その部位での使用はしないでください。けがの原因になります。

●乳幼児（乳歯）や自分で操作ができない方、口内の感覚が弱い方などは使用しないでください。

使　用　上　の　ご　注　意

1. 毛が曲がったブラシ、毛先がつぶれたブラシは、使わないようにしてください。破損した毛がブラッシング中に取れてしまうことがあります。このようなことを防ぐため、ブラシは6ヶ月ごとに新品とお取り替えください。破損の兆候が見えた場合は、速やかにお取り替えください。

2. 一般の口腔衛生用品を初めてご使用になる場合と同様、過去2ヶ月間に口腔内や歯ぐきの手術を受けられた場合は、本製品をご使用になる前に、あらかじめ歯科医師にご相談ください。

3. 本製品をご使用の結果、万一激しい出血があった場合や、本製品を使い始めて1週間経過後も出血が認められる場合には、ご使用を中止し、歯科医師にご相談ください。

4. ペースメーカーをお使いの方が本製品をご使用になる場合は、あらかじめかかりつけの医師にご相談ください。

5. 本製品は個人用衛生用品ですので、歯科医院や研究施設での複数の患者に対する使用は、意図されていません。

6. 本製品は、歯と歯ぐきの洗浄のために設計されています。本取扱説明書に記載されている以外のその他の目的では使用しないでください。本製品を適切にご使用できない場合は、すみやかに使用を中止してください。

7. 10歳以下のお子様がご使用の際は、監督下のもとに行ってください。

8. 炭酸水素ナトリウムを含む歯みがき剤をお使いの場合は使用ごとにブラシヘッドをよく水洗いしてください。中性洗剤による洗浄も効果的です。

各部の名称

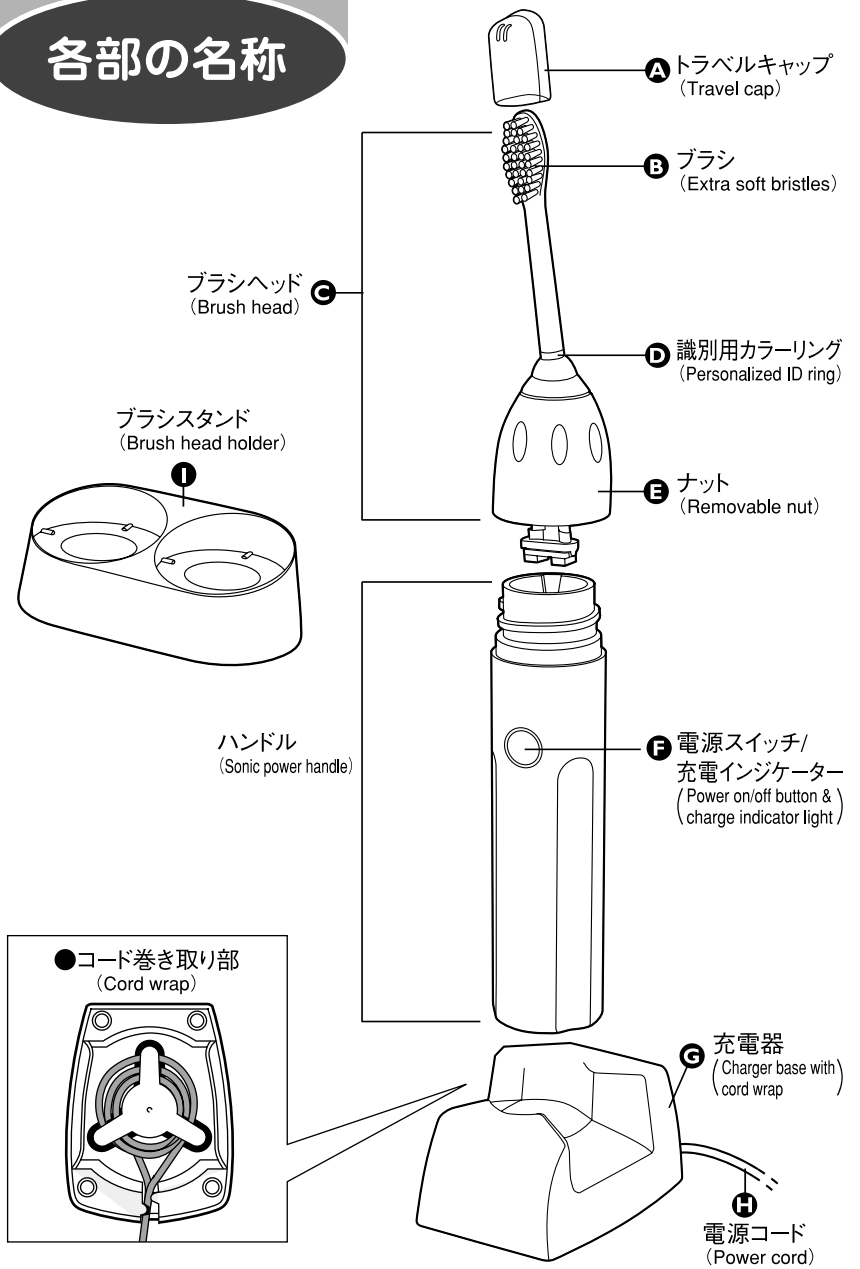
Ⓐ トラベルキャップ
（Travel cap）
Ⓑ ブラシ
（Extra soft bristles）
ブラシヘッド Ⓒ
（Brush head）
Ⓓ 識別用カラーリング
（Personalized ID ring）
ブラシスタンド
（Brush head holder）
Ⓘ
Ⓔ ナット
（Removable nut）
ハンドル
（Sonic power handle）
Ⓕ 電源スイッチ/
充電インジケーター
（Power on/off button & charge indicator light）
●コード巻き取り部
（Cord wrap）
Ⓖ 充電器
（Charger base with cord wrap）
Ⓗ
電源コード
（Power cord）

充電の仕方

ソニッケアーは充電しないと使用できません。
初めてお使いになるときや使用中に動作が停止したときには、必ず連続24時間充電してください。

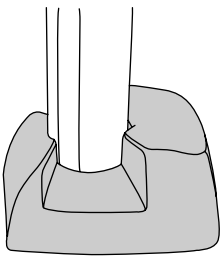

電源スイッチを正面にし、ハンドルの底面が充電器に完全に接触するようにして充電器に立てます。フル充電すると、通常の使用（2分間のブラッシングを1日2回）で約2週間使うことができます。

⚠注意
- 充電器はソニッケアー Elite e5000シリーズ専用です。他のシリーズのものはお使いになれません。
- 充電器の上にコインやクリップを置かないでください。

※充電中は本体が多少あたたかくなりますが異常ではありません。
※コンセントにつないだ充電器に本体を常に置いていても性能に問題ありません。

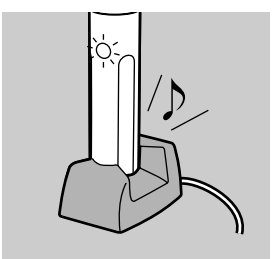

（Elite e5700、e5750のみ）
充電中は、充電インジケーターがゆっくりと点滅します。充電が完了すると点灯します。充電池がなくなりかけると、2分間の歯磨きの後にビープ音が5回聞こえ、充電インジケーターが素早く点滅します。残り2～3回程度で作動しなくなるので、すぐに充電してください。

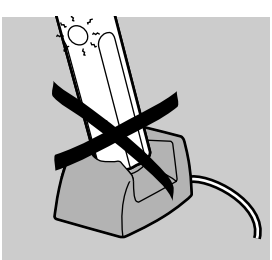

ハンドルが正しく装てんされてない場合でも充電ランプは点灯しますが充電は行なわれませんのでご注意下さい。

ソニッケアーの機能

イージースタート機能

イージースタートとは、ソニッケアーに慣れていただくまでの間、通常より弱いパワーでお使い頂き、段階的に上げていく機能です。初めてソニッケアーをお使い頂いてから13回目のブラッシングで通常のブラッシングパワーになります。12回目までは電源スイッチを入れるとビープ音が2回なり、イージースタート機能がオンになっていることをお知らせします。13回目以降はこのビープ音が聞こえなくなります。
なお、1回のブラッシング時間が1分未満の場合、1回とカウントされない場合があります。
また、イージースタート機能は工場出荷時にオンになっています。
12回目のブラッシングまでは必ず最低1分間の歯みがきを行ってください。イージースタート機能が正常に動作しない場合があります。

スマートタイマー機能

スマートタイマー機能は、米国の歯科専門家の推奨するブラッシング時間の2分を経過すると自動的に停止する機能です。2分間の動作中に電源スイッチを切っても、30秒以内に再びスイッチを入れると、中断したところからスマートタイマーが機能します。
なお、ブラッシングを30秒以上中断したり、充電を開始するとスマートタイマーは解除されます。

カドペーサー機能（Elite e5400, e5700, e5750のみ）

カドペーサー機能は、口内を均等にくまなくブラッシングするための機能です。
30秒ごとに短いビープ音と伴に、ブラシの振動が一瞬止まります。口の中をイラストの様に4箇所に分け、それぞれを30秒間隔でみがくことができます。

①上あご右側表裏
②上あご左側表裏
③下あご右側表裏
④下あご左側表裏

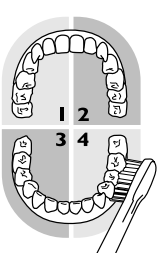

①上表側（頬側）
②上裏側（舌側）
③下表側（頬側）
④下裏側（舌側）

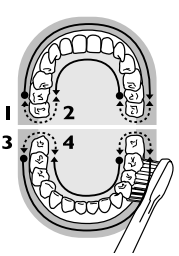

使い方

1. ブラシを取り付ける。

ブラシヘッドを正面に向け、ブラシヘッドをハンドルにまっすぐはめ込むようにしてください。

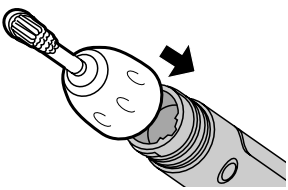

2. ナットを時計回りに回してハンドルに固定します。

使用中にブラシがガタガタ動くときは、ナットをさらにきつく締めてください。

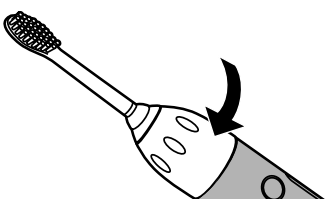

3. ブラシヘッドを数秒間水でゆすいでぬらします。

お好みにより、歯みがき剤をつけます。

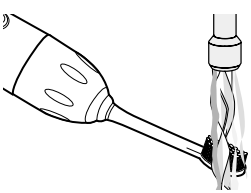

※トラベルキャップはご使用前に外してください。

4. 歯みがき剤が飛び散らないように、ブラシヘッドを口に入れてから電源スイッチを押します。

ブラシヘッドを歯と歯ぐきのさかい目に軽く当てて、ゆっくりと移動させます。
長い毛が歯間に届くよう気をつけて、同じ個所で約2秒間ブラッシングしてください。

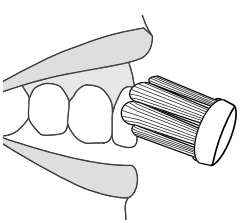

使い方

●ソニッケアーを初めてお使いいただくと、少しくすぐったい感じや、ちくちくした感じを受けることがありますが、慣れるにつれ、この感じは少なくなっていきます。

●ソニッケアーの動きに任せてください。力を入れてこすったりすると、逆効果です。

5. 2分間のブラッシングを終えると、自動的にスイッチが切れます。

さらに磨きたい場合は、もう一度スイッチを入れます。

6. ブラッシング後は、口を水でゆすぎます。

7. 水道蛇口から水を出して、ブラシヘッドに残っている歯みがき剤を洗い流してください。

電源を入れてブラシヘッドを振動させると、よりきれいになります。

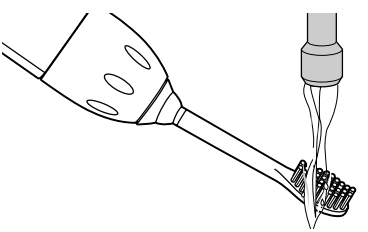

上手なみがき方

以下のポイントに注意していただくと、効果的なブラッシングができます。

ソニッケアーの効果的なブラッシング方法

ブラシを少し斜め（約45°）にあててください。

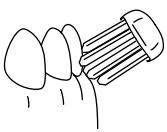

歯と歯ぐきの境目

ブラシを少し立てるようにあててください。

奥歯の奥

かみ合わせ面に対して垂直にあててください。



かみ合わせ

ブラシをたてにあててください。

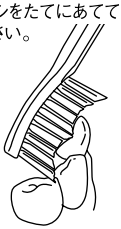

前歯の裏（タテにあてる）

ブラシを歯の表面に少し斜め（約45°）にあててください。

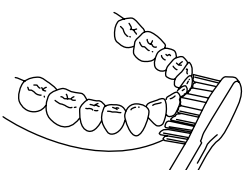

歯の表面

ブラシを歯の表面に少し斜め（約45°）にあててください。

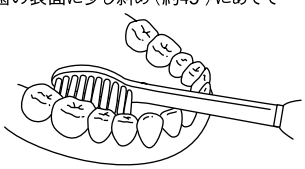

奥歯の内側

ヒント

- 歯みがき剤をお使いになる場合、飛び散るのを防ぐためブラシヘッドを口腔内に入れてから電源を入れてください。
- ソニッケアーの性能を最大限引き出すために、ブラシヘッドを歯に軽く当ててブラッシングしてください。
- カドペーサー機能を利用すると口腔内を均等にくまなくブラッシングできます。
- ソニッケアーをはじめてお使いいただく方は、慣れるまでくすぐったく感じることがあります。慣れるとともにこの感覚は減少します。
- フル充電の状態で、1日2回（2分間）のブラッシングで約2週間お使いいただけます。
- お好みによって、舌のブラッシングにもお使いいただけます。

このような場合

●歯列矯正装置をつけている方

歯と歯列矯正装置の間に、ブラシの毛先を少し斜めに当てるようにしてみがきます。
歯と矯正装置の間にブラシの毛先を無理に押し込まないでください。

●治療後の歯科技工物

クラウン、ブリッジ等の歯科技工物にも安心してご使用いただけますが、何か異常を感じた場合、歯科医にご相談ください。

お手入れの仕方

1. ブラッシング後、ブラシヘッドを水で洗い自然乾燥させてください。
中性洗剤による洗浄も効果的です。
電源を入れて振動させると、よりきれいになります。

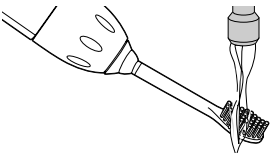

2. 週に一度、ナットに覆われた部分も含め、ブラシ全体をお掃除してください。
ハンドルからブラシヘッドをはずしてください。ブラシの灰色のゴム部分を上から押さえて、ナットをはずしてください。ナットに覆われたブラシの部分についた汚れを水洗いし、完全に水気を拭き取ってください。とくに金属部分と磁石部分は、完全に水気を拭き取ってください。

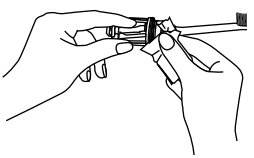

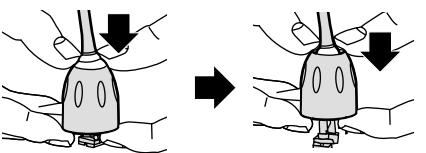

ナットをブラシヘッドの上からかぶせ、カチッと音がするまで押さえます。

3. 使用後にハンドルをクリーニングします。
ハンドルからブラシを取り出し、湿らせた綿棒または布で溝穴と出っ張り部分をきれいに掃除してください。
乾いた布で水気を完全に拭いてください。

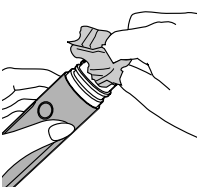

4. 充電器は、必要に応じてお掃除してください。
お掃除の前に、充電器をコンセントから抜いてください。やわらかい布またはペーパータオルで充電器を掃除してください。

> ⚠注意　充電器は決して水の中に入れないでください。

> ⚠注意　お手入れの際、シンナー、ベンジン、アルコール類を使用すると、変色、変形の原因にもなりますので、絶対に使用しないでください。充電器のお掃除の時に、電源コード・プラグを調べてください。もし電源コード・プラグの異常がありましたら、事故防止のため使用を中止し、プラグをコンセントから抜いてソニッケアーコール0120-418-608までご相談ください。
> 余分なコードを収納するのに、充電器下のコード巻き取り部をお使いください。

故障かな?と思ったら
お調べください

故障かな?と思ったら

歯にブラシヘッドを強く押し当てると動作が弱くなる。

●ブラシヘッドを押し当てすぎると、ブラシの振幅が小さくなります。ブラシヘッドは歯に軽く当てるようにしてください。

ブラッシングの力が弱く感じる。

●充電してください。

●場合によってはブラシヘッドの交換が必要です。

●イージースタート機能が働いている可能性があります。詳しくは7ページをご覧ください。

使い始めてから2分程度でブラシヘッドの動作がとまる。

●スマートタイマー機能により、電源スイッチを入れてから2分経過すると自動的に動作がとまります。詳しくは7ページをご覧下さい。

充電しても数分しか使えない。

●ハンドルの底が充電器の充電部に接触するようにまっすぐ立ててください。

●充電時間が短い可能性があります。充電池を活性化するために24時間以上充電してください。

●それでも数分しか動作しないときは、電池の寿命の可能性があります。充電池の寿命は充放電約500回が目安です（使用方法により異なります）。充電池の交換はできません。

故障かな?と思ったら

変なにおいがする

●ハンドル、ブラシヘッド、充電器をお手入れしてください。
詳しくは11ページをご覧ください。

動作しない。

●充電池を活性化するために24時間以上充電してください。
●電源にプラグがきちんとささっていることを確認してください。
●場合によっては、ブラシヘッドを再度装着、あるいは交換する必要があるかもしれません。

動作がおかしい(例:動きにムラがある)。

●充電池を活性化するために24時間以上充電してください。

充電インジケーターが素早く点滅する。

●充電残量が少なくなっています。残り3回程度で作動しなくなる恐れがありますので、速やかに充電してください。

ブラシを動かすとナットがガタガタ音をたてる。

●使用中はブーンといったソニッケアー特有の音がします。ガタガタ大きな音がする場合は、ナットが緩んでいる可能性があります。ナットを強く締めなおしてください。
●スイッチを入れる前にトラベルキャップがはずれていることを確認してください。

ブラシヘッドが歯にあたる時にガタガタ音がする。

●ブラシを少し斜め(約45°)にあててください。詳しくは10ページをご覧ください。

＊ 以上の処置により、正常な状態に戻らない場合は、
ソニッケアーコール(0120-418-608)にお問い合わせください。

廃棄するとき

ニカド電池のリサイクルについて

この製品はニカド電池を使用しています。
ニカド電池はリサイクル可能な貴重な資源です。ご使用済みの製品の廃棄に際しては、ニカド電池を取り出し、各自治体の処理方法に従いリサイクルにご協力ください。
※ご不明な場合は、ソニッケアーコール（0120-418-608）までお問い合わせください。

Ni-Cd

⚠注意
・製品を廃棄するとき以外は、絶対に本体を分解しないでください。
・一度分解したハンドルは安全上の理由から、絶対に再使用しないでください。

充電池の取り外し方

スイッチを“ON”にして、完全に動作しなくなるまで電池を放電させてから行ってください。

1. ドライバーをハンドル上部にある穴に差し込み、側面を割るようにひねりながら差し込んでいきます。

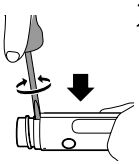

2. すき間ができたら、もう一方にある穴から同様にドライバーを差し込み、ハンドルを2つに割ります。

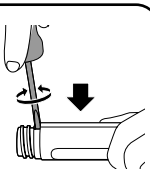

3. ドライバーをハンドルの正面上部よりできたすき間に差し込み、こじあけます。

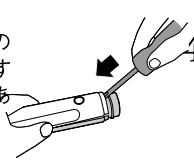

4. 突き通したドライバーをひねり、

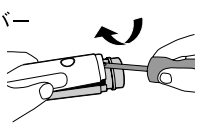

5. ハンドルを2つに割ります。

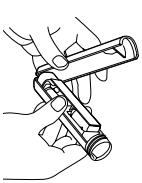

6. 固定されている電子基板の下にドライバーをあらゆる方向から数回差し込んでひねります。

7. 6の動作を繰り返し、電子基板がゆるんだら、ハンドルから取りはずします。

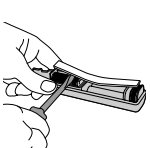

8. ニカド電池の横にドライバーを差し込んでひねり、充電池を完全に取りはずしてください。

Table of contents

General description
IMPORTANT SAFEGUARDS
DANGERS
WARNINGS
MEDICAL WARNINGS
Customer service information
Technical specifications
Preparing for use
Charging your Sonicare®
Using your Sonicare®
Features
Cleaning
Replacement
Battery recycling
GUARANTEES AND SERVICE
Troubleshooting guide

General description

Ⓐ Travel cap
Ⓑ Extra soft bristles
Ⓒ Brush head
Ⓓ Personalized ID ring
Ⓔ Removable nut
Ⓕ Power on/off button & charge indicator light
Ⓖ Charger base with cord wrap
Ⓗ Power cord
Ⓘ Brush head holder

Please refer to Page 5.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING

Sonicare® has been carefully engineered for both effectiveness and safety. However, basic safety precautions should always be followed when using any electrical product, especially when children are present.

DANGERS

To reduce the risk of electrocution or fire:

1) DO NOT plug the charger into an incorrect voltage source outlet. It has been designed for use with a specific electrical voltage. Refer to the bottom (or back) of the charger for the correct voltage specification. Voltage converters and plug adapters DO NOT guarantee voltage compatibility. Never force the plug into an outlet.
2) DO NOT place or store the charger where it can fall or be pulled into a tub, sink or toilet.
3) DO NOT place or drop the charger into water or other liquid.
4) DO NOT reach for a charger that has fallen into water. Unplug immediately.

WARNINGS

To reduce the risk of burns, electrocution, fire or injury:

1) Close supervision is necessary when this product is used by or on children under the age of 10 or the disabled.
2) If you are unable to handle this product properly, discontinue use.
3) Use this product only for its intended use as described in this booklet. Do not use attachments other than recommended by the manufacturer. See voltage information above.
4) Never operate the charger if it has a damaged cord or plug, if it has been dropped or if the handle has been damaged in any way. This product contains no serviceable parts. If repair is needed please refer to the Customer service infomation section of this manual and contact one of our representatives.
5) Keep the cord a way from heated surfaces.
6) If your favorite toothpaste includes peroxide, baking soda or other bicarbonate (common in whitening toothpastes), it is important that you thoroughly clean your brush head with soap and water after each use.
7) Do not use the charger base outdoors.
8) Do not use while bathing.
9) Unplug the charger base before cleaning and assure that it is dry before plugging it into an electrical outlet.

MEDICAL WARNINGS

1) Consult your dental professional before using this product if you have had oral or gum surgery in the previous 2 months.
2) Contact your dental professional if excessive bleeding occurs after using this product or bleeding continues to occur after 1 week of use.
3) If you have any questions concerning usage with a pacemaker or other implanted device, consult your physician or the implanted device manufacturer prior to use. Sonicare® has been tested and is compliant with safety standards for electromagnetic devices.
4) Avoid using a brush head with crushed or bent bristles. Damaged bristles may break off while brushing. In order to prevent this, replace the brush head with a new one every 6 months or sooner if signs of wear appear.
5) The Sonicare® toothbrush is a personal care device and is not intended for use on multiple patients in a dental office or institution.
6) This product is designed for cleaning teeth, gums and tongue only. Do not use for any other purpose.

SAVE THESE INSTRUCTIONS

Customer service information

If you have any questions after reading this manual, feel free to contact our Customer Service Center or visit our website.

Customer Service Center

1-800-682-7664 (North America), outside North America contact your local Philips Customer Care Center.
0120-418-608 (Japanese language only)

Internet Information

www.sonicare.com (North America) www.philips.com (outside North America)
www.sonicare.jp (Japanese language only)

Technical specifications

Product Name:	Sonicare® Elite e5000 Series
Voltage	100V, 50-60Hz
Speed	Approximately 31,000 brush strokes per minute
Charging Time	24 hours (empty to full)
Operation Time:	A fully charged Sonicare® lasts up to 2 weeks of normal brushing
Battery Type	NiCd
Power Consumption	1.5W max

Preparing for use

To attach the Sonicare® brush head:

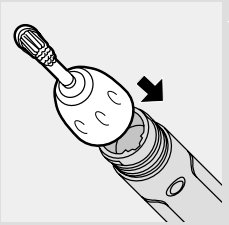

1 Align the front of the brush head with the front of the toothbrush handle. Match the bars on the brush head with the notches inside the top of the handle and slide the brush head onto the handle.

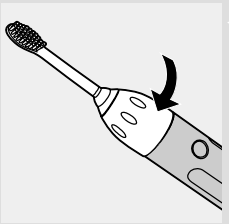

2 Screw the brush head nut clockwise until it's firmly tightened. If the brush head rattles when in use, tighten the nut further.

3 Remove the travel cap from your brush head when you are ready to brush.

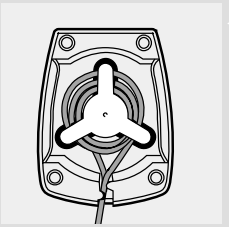

4 Use the cord wrap in the bottom of the charger to store excess cord.

Charging your Sonicare®

Sonicare® comes with the batteries completely discharged and should be charged for at least 24 hours during the first few days of use.

It is recommended that you keep your Sonicare® in the charger when not in use to maintain a full battery charge. It takes at least 24 hours to fully charge Sonicare®'s battery.

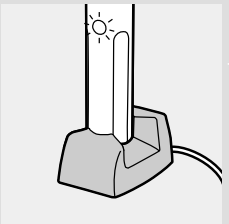

1 To charge your Sonicare®, place the handle in the charger with the power button facing forward. Be sure the bottom of the handle sits back securely in the charger, making complete contact.

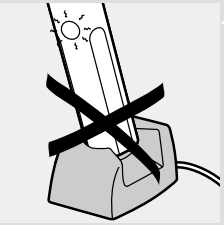

- When the handle is placed incorrectly in the charger, the charge indicator light may still illuminate, but charging will not take place.

Handles of other Sonicare® models do not fit in this charger and will therefore not charge effectively. Do not attempt to force a handle into this charger as this will cause damage.

Using your Sonicare®

Useful tips

- The brush head comes with a convenient travel cap. Remove the travel cap from the brush head before turning on your Sonicare®.
- Place the brush head in your mouth before turning on your Sonicare®, and be sure it is turned off before removing it from your mouth, otherwise toothpaste may splatter.
- Rinse the brush head and bristles after each use.
- Clean the brush head weekly, including under the nut.
- A fully charged Sonicare® will provide approximately 2 weeks of typical use (2 minutes of brushing twice a day), making it easy to travel without the charger.

Remember : voltage converters and plug adapters DO NOT guarantee voltage compatibility. Always check for voltage compatibility.

Brushing technique

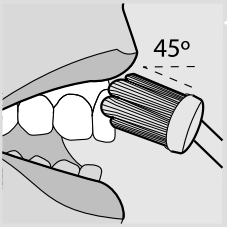

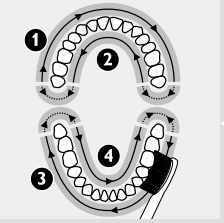

Follow these simple steps to maximize your brushing experience:

1. Before turning the Sonicare® on, place the bristles of the brush head on your gumline at a 45-degree angle.

2. Hold the handle with a light grip, turn the Sonicare® on, and gently move the bristles in a small circular motion so the longer bristles reach between your teeth. After a few seconds, glide the bristles to the next section. Continue this routine throughout your 2-minute brushing cycle.

3. To maximize Sonicare®'s effectiveness apply only light pressure and let the Sonicare® toothbrush do the brushing for you. Do not scrub.

4. To make sure you brush evenly throughout the mouth, divide your mouth into 4 sections: outside top, inside top, outside bottom and inside bottom teeth. Begin brushing in section 1 (outside top teeth) and brush for 30 seconds before moving to

section 2 (inside top teeth). Continue brushing for 30 seconds in each section progressing through all 4 sections until you've brushed for 2 minutes.

5 After having completed the 2-minute brushing cycle, additional time should be spent brushing the chewing surfaces of your teeth.

6 Press the power button to turn the brush on and off as needed.

- You may also brush your tongue, with the toothbrush turned on or off, as you prefer.

Tips for specific oral care needs

- Stain removal

In areas where staining occurs, spend extra brushing time to assist with stain removal.

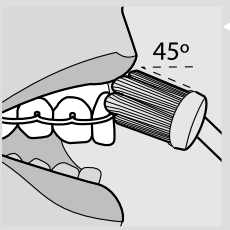

- Braces

The brush should be placed at a 45-degree angle between your braces and gumline. Using light pressure, gently move the bristles in a small circular motion so that the long bristles reach between your teeth for 2 seconds. Then gently turn (roll) the brush handle so the bristles clean the braces and the rest of the tooth before you move the bristles to the next tooth. Continue this until you have brushed all of your teeth. Please note that brush heads will wear out sooner when used on braces.

- Dental restorations (dental work)

Use Sonicare® on dental restorations (such as implants, caps, crowns, bridges and fillings) as you would on your normal tooth surfaces. Work the bristles around all areas of the restoration for thorough cleaning.

- Periodontal pockets

Your dental professional may have indicated that you have periodontal pockets, deep pockets where plaque bacteria collect. If this is the case, after brushing for a full 2 minutes, spend extra time gently brushing these areas to improve your gum health.

Features

Easy-start brushing power ramp-up

- This Sonicare® model comes with the Easy-start feature activated, which helps you get used to brushing with Sonicare®.
- Brushing power will gently increase to full power over the first 12 brushings.
- The Easy-start feature is active if you hear 2 beeps immediately after turning on your Sonicare®. Once the appliance has reached

optimal brushing power (after the 12th brushing), you will no longer hear the double beep at the beginning of your brushing routine.

▸ *Note: Each of the first 12 brushings must be at least 1 minute in length to properly advance the Easy-start ramp-up cycle.*

To deactivate or activate the Easy-start feature:

1. Attach your brush head to the handle.
2. Place the handle in the plugged-in charger.
3. To deactivate the Easy-start feature: while the handle is still in the charger, press and hold the power button for 5 seconds. You will hear 1 beep to indicate that the Easy-start feature has been deactivated.
4. To reactivate the Easy-start feature: while the handle is still in the charger, press and hold the power button for 5 seconds. You will hear 2 beeps to indicate that the Easy-start feature has been activated.

Using the Easy-start feature beyond the initial ramp-up period is not recommended and reduces Sonicare®'s effectiveness in removing plaque.

The Easy-start feature should be deactivated when the Sonicare® is used in clinical trials.

Smartimer 2-minute timer

- This Sonicare® model comes with the Smartimer feature, which automatically sets the brushing time to the 2 minutes recommended by dental professionals.
- After 2 minutes, the Smartimer will automatically turn off the toothbrush.
- If you wish to pause or stop brushing during your 2-minute cycle, press the power button. Press the power button again and the Smartimer will pick up where you left off.

▸ *The Smartimer will automatically reset to the beginning of a 2-minute cycle if:*

- brushing is interrupted for 30 seconds or longer;
- the handle is placed in the charger.

Quadpacer® 30-second interval timer (e5400,e5700,e5750)

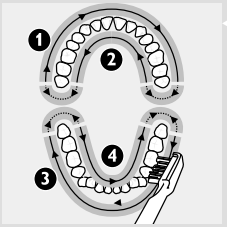

- Quadpacer® makes sure that you brush all sections of your mouth evenly and thoroughly. At 30, 60, and 90 seconds, you will hear a short beep and feel a brief pause in the brushing action. This is your signal to move to the next section of your mouth.

Battery Charge Indicator (e5700, e5750)

- If the battery charge of your Sonicare® is low, you will hear 5 beeps after you have brushed your teeth for 2 minutes and the charge indicator light will flash rapidly.

When you hear the low charge indication, you have 3 or fewer 2-minute brushings left.

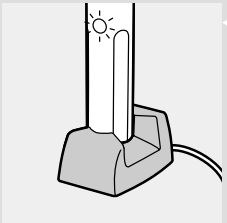

1. Place the handle in the charger base (with the power button facing towards you) to begin the recharging process.

- The charge indicator light flashes slowly when the handle is in the charger base to signal charging is in progress.
- When the Sonicare® is fully charged, the charge indicator light is constantly on (not flashing), signaling that your Sonicare® is ready for use.

When not in use, keep your Sonicare® in the charger to maintain a full battery charge.

Cleaning

By following these simple steps, you should get years of worry-free brushing:

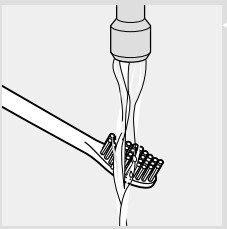

1. Rinse the brush head and bristles after each use, and air dry only.

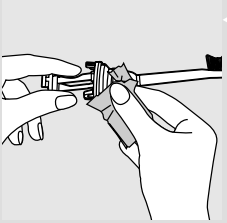

2 Clean the brush head at least once a week, including under the nut.

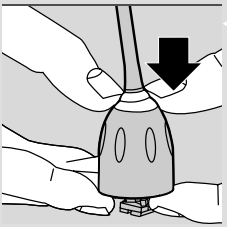

3 To remove the nut:

◗ Press down gently on the white area.
Avoid using sharp objects to push on the seal as this may cause damage.

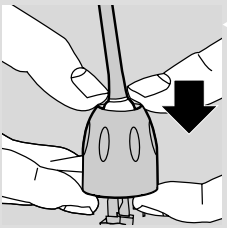

◗ Pull the nut over the top of the brush head.

4 To replace the nut, slip the nut over the brush head shaft and pull until it clicks back on.

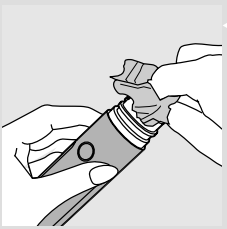

5 Clean and dry the handle weekly.

6 Clean the charger base periodically.
UNPLUG the charger before cleaning. After cleaning the charger, completely dry the charger before plugging it into an electrical outlet.

Mild soap, water and a moist cloth are recommended for cleaning your Sonicare® handle and charger.

Replacement

Brush head

Replace your brush head every 6 months for optimal results.
Use only Sonicare® replacement brush heads for this model.

Battery recycling

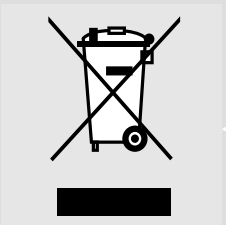

HANDLE CONTAINS NICKEL CADMIUM BATTERIES. BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY.

- The batteries inside your Sonicare® cannot be replaced, but are easily removed for recycling. At the end of product life and prior to disposal, please remove the batteries from the handle by following the instructions below.
- Do not throw the appliance away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment.

Removing the batteries

Please note that this process is not reversible.

To remove the batteries yourself, you will need a flat-head (standard) screwdriver. Basic safety precautions should be observed when following the procedure outlined below. Be sure to protect your eyes, hands, fingers and the surface on which you are working.

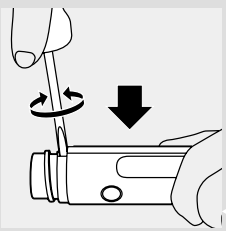

1 Deplete the batteries of any charge by removing the handle from the charger, turning the Sonicare® on and allowing it to run until it stops. Repeat this step until the Sonicare® will no longer operate.

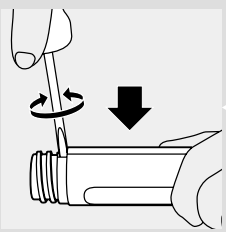

2 Insert a screwdriver into one of the slots located near the top portion of the handle, push the screwdriver blade into the handle as far as it will go, and twist the blade. The housing will begin to split.

3 Remove the screwdriver and repeat the above instruction using the other slot located on the opposite side of the handle. Twist the blade and the housing will continue to split.

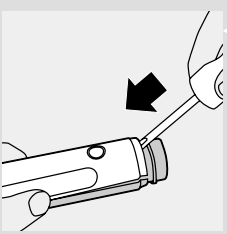

4 Now, insert the screwdriver into the middle slot located on the top front part of the handle as shown and push the blade in as far as it will go.

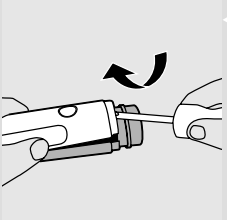

5 Now use the screwdriver as a lever to pry the 2 handle sections apart.

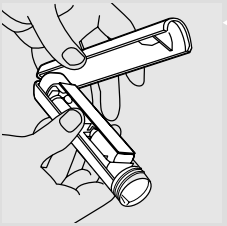

6 Pull the 2 handle sections completely apart.

7 Insert the screwdriver underneath the electronic circuit board in multiple places.

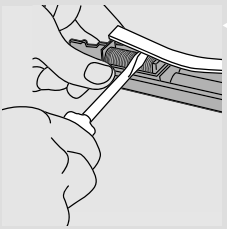

8 Twist and pry the electronic circuit board loose until it is completely separated from the handle.

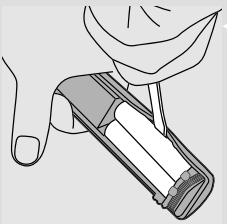

9 Pry the 2 AA-sized cylindrical nickel-cadmium batteries loose by inserting the screwdriver on the sides of the two batteries in the locations shown in the figure.

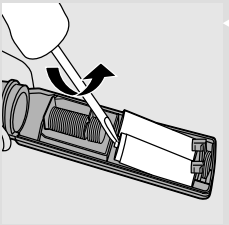

10 Use a twisting and prying motion to break the glue bond around the batteries.The 2 batteries are joined together with glue and will be lifted out together.

US and Canada

For information on proper battery recycling, please visit the Rechargeable Battery Recycling Corportation website at www.rbrc.org or call (678)419-9990. (Philips Oral Healthcare, Inc. is not affiliated withthe RBRC.)

GUARANTEES AND SERVICE

SEE SEPARATE PHILIPS WORLDWIDE GUARANTEE LEAFLET FOR STANDARD GUARANTEE.

GUARANTEE RESTRICTIONS

WHAT IS NOT COVERED UNDER WARRANTY:
- BRUSH HEADS
- DAMAGE CAUSED BY MISUSE, ABUSE, NEGLECT OR ALTERATIONS
- NORMAL WEAR AND TEAR, INCLUDING CHIPS, SCRATCHES, ABRASIONS, DISCOLORATION OR FADING

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTIES SET FORTH IN THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

LIMITATION OF REMEDIES

IN NO EVENT SHALL PHILIPS ORAL HEALTHCARE, INC. OR ANY OF ITS AFFILIATED OR SUBSIDIARY COMPANIES BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, TORT, OR ANY OTHER LEGAL THEORY. SUCH DAMAGES INCLUDE, WITHOUT LIMITATION, LOSS OF SAVINGS OR REVENUE; LOSS OF PROFIT; LOSS OF USE; THE CLAIMS OF THIRD PARTIES INCLUDING, WITHOUT LIMITATION, DENTISTS AND DENTAL HYGIENISTS; AND COST OF ANY SUBSTITUTE EQUIPMENT OR SERVICES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Troubleshooting guide

If you are unable to solve your problem by means of the troubleshooting guide below, in North America contact 1-800-682-7664 or contact us online at www.sonicare.com. Outside North America, contact the Philips Customer Care Center or contact us online at www.philips.com. In Japan, you can contact the Sonicare® Customer Care Center at 0120-418-608 (Japanese language inquiries only)

Problem	Solution
The Sonicare® toothbrush does not work.	Recharge your Sonicare® for at least 24 hours.
	Verify your Sonicare® is plugged into a live electrical outlet and not into an outlet controlled by a light switch.
	You may need to re-attach or replace the brush head.
I feel a tickling sensation when I use Sonicare®.	You may experience a slight tickling/tingling sensation when using Sonicare® for the first time. As you become accustomed to brushing with Sonicare®, this sensation will diminish.
The brush head rattles when I use Sonicare®.	Sonicare® should produce a gentle hum during operation. Tightening the brush head nut can eliminate excessive rattling. If rattling does not stop, you may need to replace the brush head. Make sure you have removed the travel cap before switching the appliance on.
The brush head chatters against my teeth.	This can be avoided by keeping the brush head properly oriented, with the brush head placed on the gumline at an angle of 45 degrees.
Brushing seems less powerful.	The handle may need recharging.
	The Easy-start feature may be on and needs to be deactivated (see 'Features').
	You may need to clean your brush head.
	You may need to replace your brush head.
Unpleasant odor	Clean the handle, brush head and charger thoroughly (see 'Cleaning').
	Replace the brush head with a new one.

保証書と修理サービスについて (必ずお読みください)

保証と
アフターサービス

〈保証書・最終ページに付属〉

●下記の保証は、本製品を最初に購入された方のみ適用されます。

●保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間……お買上げ日から2年間

【ご不明な点や修理に関するご相談は】

●修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、ソニッケアーコール（0120-418-608 以下省略）にお問い合わせください。

【修理を依頼されるときは】

●修理をご依頼されるまえに、この取扱説明書をよくお読みいただき、再度点検のうえ、尚、異常のあるときはご使用を中止し、お買い上げの販売店またはソニッケアーコールへご依頼ください。

【保証期間中は】

●修理に際しましては保証書をご提示ください。

●保証書の規定に従って販売店が修理させていただきます。

【保証期間が過ぎているときは】

●お買い上げの販売店またはソニッケアーコールにご相談ください。修理によって機能が維持できる場合は、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

●本製品の保証は海外においても有効です。

●日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。

●海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。

便　利　メ　モ

お買い上げ日	年　月　日	お買い上げ店名	TEL.（　　）

ご使用の時このような症状はありませんか？

●本体にさわると時々電気を感じる。
●こげくさい臭いがする。
●電源コード部を動かすと通電したり、しなかったりする。
●その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、スイッチを切り、電源プラグをコンセントからはずして、必ず販売店にご相談ください。

仕　　様

品　　名	音波式電動歯ブラシ
形　　名	Elite e5000シリーズ
定格電圧	AC100V、50-60Hz
ブラシ振動数	約31,000ストローク/分
充電時間	約24時間
使用時間	完全充電後、通常使用 （2分間のブラッシングを1日2回）で約2週間
使用充電池	ニカド電池（Ni-Cd）
消費電力	1.5W（充電時）

● ブラシヘッド ●

最良のブラッシング効果を得るため、ブラシヘッドは少なくとも6ヶ月ごとに交換してください。
破損の兆候が見えた場合は、速やかにお取り替えください。
ソニッケアーElite e5000シリーズのブラシヘッドは、Eliteシリーズ専用のものをお使いください。

●ソニッケアーの修理受付はお買い上げの販売店またはソニッケアーコールがいたします。
●修理サービス等についておわかりにならないことは、下記にお問い合わせください。

ソニッケアーコール
（祝日を除く月~金10:00~18:00）
0120-418-608

ホームページアドレス http://www.sonicare.jp/

製造元
Philips Oral Healthcare, Inc.
35301 SE Center Street
Snoqualmie WA 98065 U.S.A.

無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で故障した場合には、お買い上げの販売店が無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、商品と本書をご持参、ご提示のうえ、お買い上げの販売店または、ソニッケアーコール（0120-418-608 以下省略）にご依頼ください。
3. ご転居の場合は事前にお買い上げの販売店にご相談ください。
4. ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、ソニッケアーコールにご相談ください。
5. 保証期間内でも次の場合には有料修理になります。
   ①使用上の誤り及び不当な修理や改造による故障及び損傷。
   ②お買い上げ後の輸送、移動、落下等による故障及び損傷。
   ③火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
   ④一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
   ⑤本書の提示がない場合。
   ⑥本書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。
6. 本保証書は再発行いたしませんので大切に保管してください。

修理メモ

*この保証書は、本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。従ってこの保証書によってお客様の法律上の権利を制限するものではありません。保証期間経過後の修理についてご不明の場合は、お買い上げの販売店またはソニッケアーコールにお問い合わせください。